
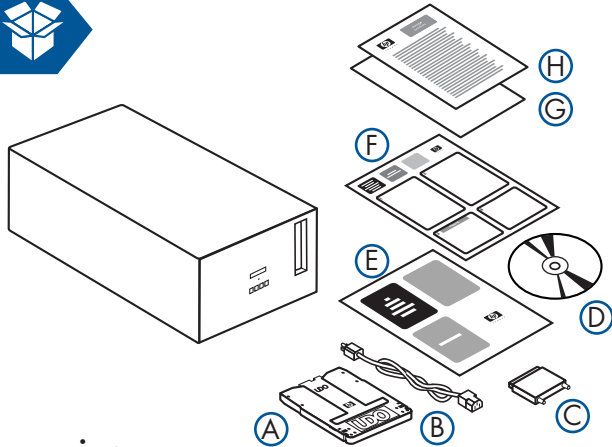



hp
StorageWorks
Optical
700ux/1100ux

Getting
Started

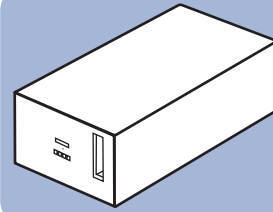

Accessories:

- A. UDO media
- B. Power cord (U.S.)
- C. Terminator
- D. Documentation CD
- E. Setup Guide
- F. Getting Started poster
- G. Warranty information
- H. Safety Guide

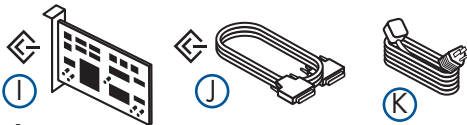


Not Included:

- I. LVD SCSI adapter for host system
- J. LVD SCSI cable
- K. Non-U.S. power cord


FRONT VIEW:

- A. LCD Display
- B. Activity Indicator
- C. Menu Navigation Buttons
[CANCEL, PREV, NEXT, ENTER]
- D. Mailslot

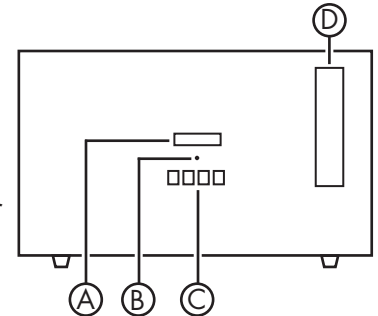

BACK VIEW:

- A. Power Switch
- B. AC Inlet
- C. SCSI Ports

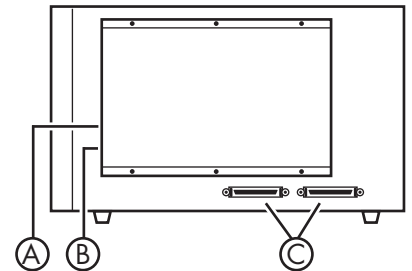

Note: See the *HP StorageWorks Optical 700ux/1100ux User Guide* for detailed information regarding these features.




Caution: Components can be damaged by electrostatic discharge. Ensure you are properly grounded when touching static-sensitive components.



Note: The following is an overview of the installation procedure. For detailed information, refer to the Setup Guide that shipped with this product.


1

Getting Connected

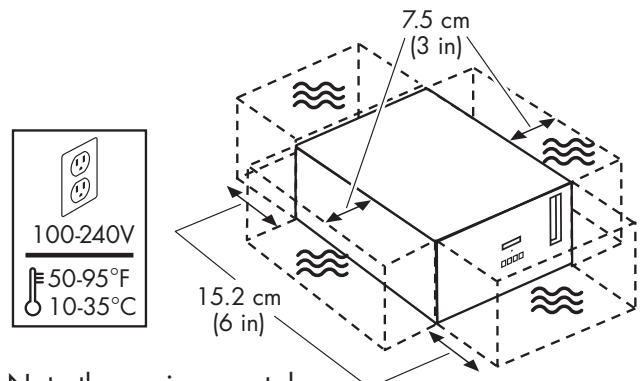

Note the environmental considerations. Sufficient clearance is necessary to ensure adequate air circulation.


2

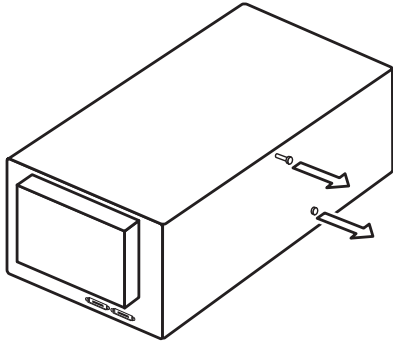

Caution: Shipping screws must be removed to allow the jukebox to function properly.


Remove the two white shipping screws located on the left side of the jukebox.

3

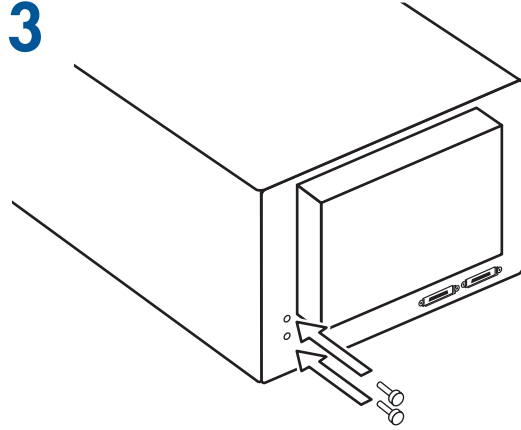

Store the screws by attaching them to the back of the jukebox.

4

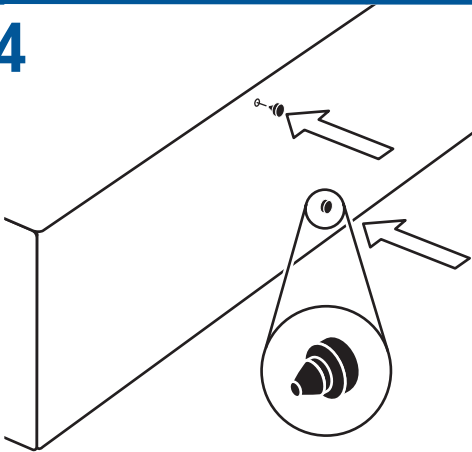


Fill the shipping screw holes with the two black, rubber plugs provided.



Note: For rack mount configurations, refer to the installation procedure provided with the rack mount kit.

5

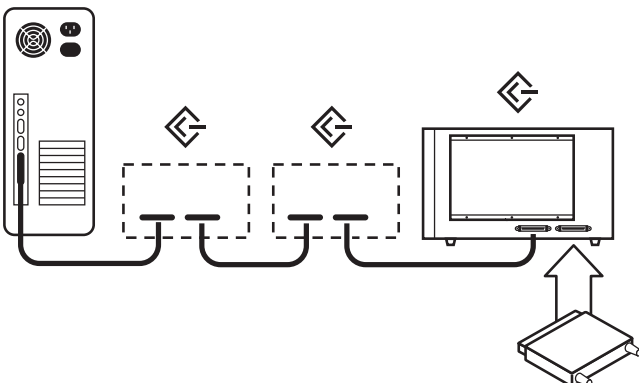


Connect the jukebox to your host computer and terminate the last device in the SCSI chain.



Warning: This product can only be used with an HP approved power cord for your specific geographic region. Use of a non-HP approved power cord may result in:


- 1) noncompliance with individual, country-specific safety requirements;
- 2) insufficient conductor ampacity that could result in overheating with potential personal injury and/or property damage;
- and 3) a fractured power cord, which could cause the internal contacts to be exposed, which potentially could subject the user to a shock hazard. HP disclaims all liability when HP approved power cords are not used.

6

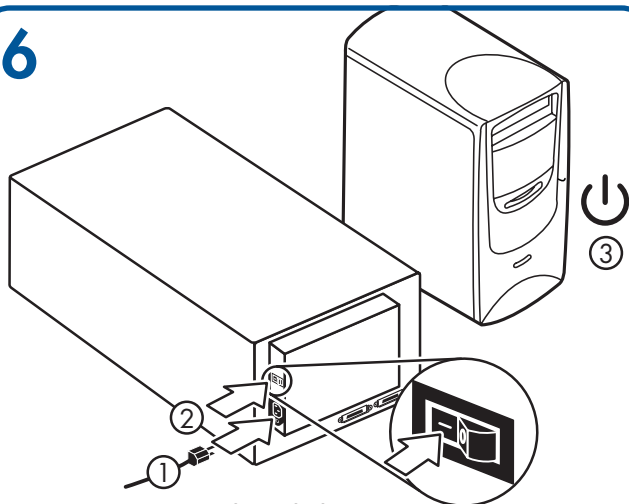

Connect power to the jukebox.
Power on the jukebox and then the host system.

7

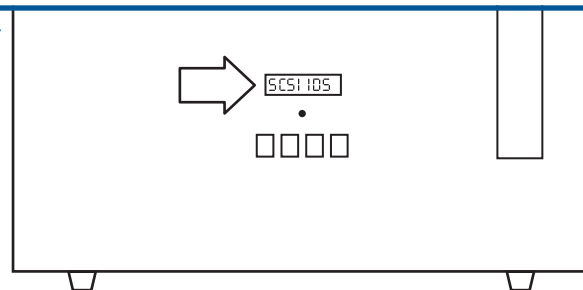


If necessary, set the jukebox and drive SCSI IDs by selecting **READY** > **ADMIN*** > **SCSI IDS*** from the jukebox menu. Ensure that there are no SCSI ID conflicts with existing devices. The jukebox default setting is "6", drive 1 is "5", and drive 2 is "4".



Note: The default administrative password is "000 000 000".

8

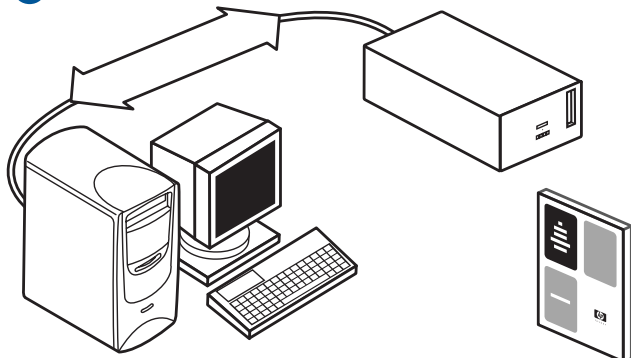


Configure the jukebox for your operating system.



Note: Refer to the jukebox Setup Guide for detailed procedures.

9

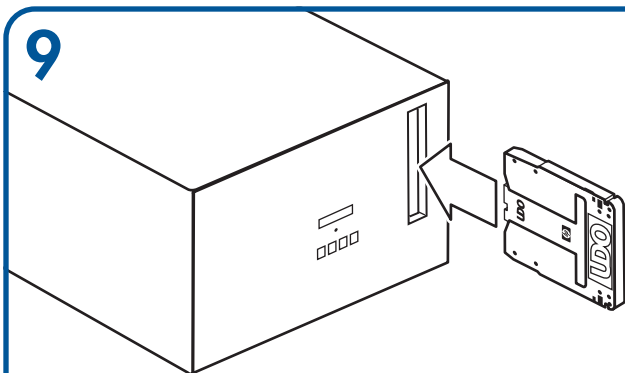


Select **READY** > **LOAD***. Load a disk into the jukebox by inserting it gently but firmly into the opening on the front panel, shutter end first, and with the side you want to access facing to the right (A or B).


Navigating the Menu



Note: See the *HP StorageWorks Optical 700ux/1100ux User Guide* for detailed information on using the menu.

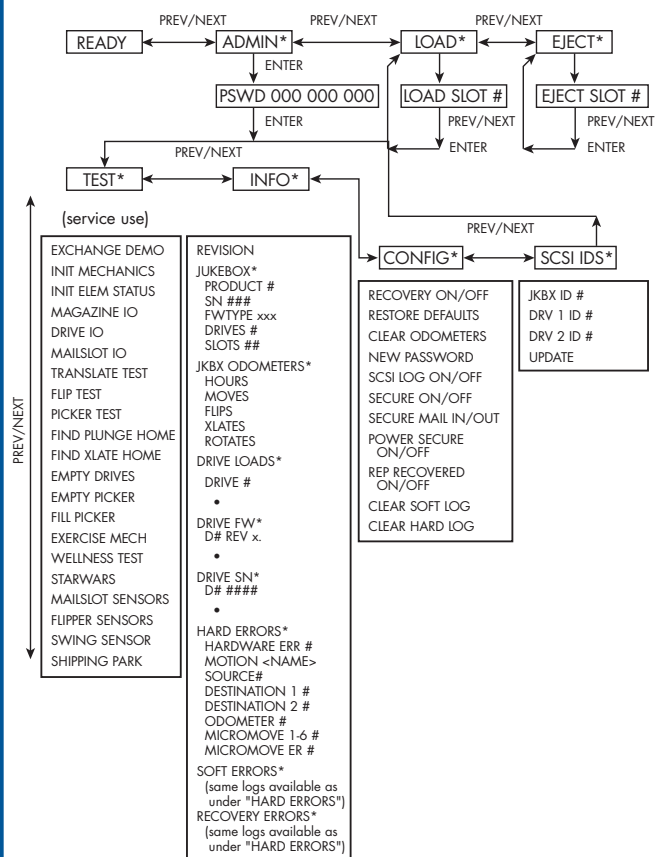

Using UDO Media

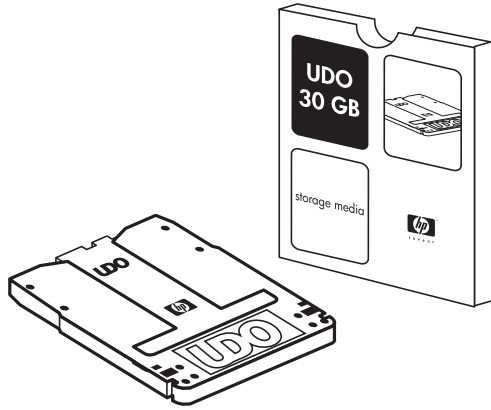


HP UDO media meets HIPPA and federal archival regulations and offers customers both WORM and ReWritable formats. By using HP UDO media in your HP StorageWorks UDO jukeboxes and drives, you safeguard your investment by preserving the integrity of your data. HP develops, designs, qualifies, and exhaustively tests both hardware and media together to ensure the highest level of media quality and reliability.

To order HP UDO media, contact your local area HP Authorized Reseller or buy online from:

<http://www.hp.com/go/storagemedia>.

For HP UDO 30GB Write Once media, order part number Q2030A. For HP UDO 30GB ReWritable media, order part number Q2031A.

Using HP StorageWorks Library and Tape Tools

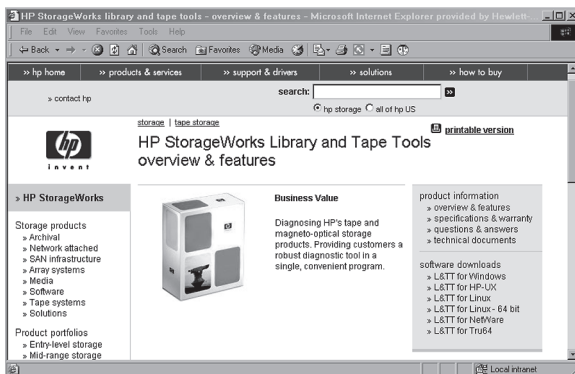

HP StorageWorks Library and Tape Tools (L&TT) is a robust diagnostic tool for tape mechanisms, tape automation, magneto-optical and UDO products. L&TT provides functionality for firmware downloads, verification of device operation, maintenance procedures, failure analysis, corrective service actions and some utility functions.

Seamless integration is provided with HP's hardware support organization by generating and emailing support tickets.

The support ticket delivers a snapshot, or an in-depth view, of the storage system.

L&TT is a free download from the Web and deploys in fewer than five minutes. It is ideal for customers who want ensured product reliability, self-diagnostics and faster resolution of device issues.

For more information, visit <http://www.hp.com/support/tapetools>.

Getting Help

- HP Product Information Site:
<http://www.hp.com/go/udo>
- HP Technical Support and Phone Numbers:
<http://www.hp.com/support>
- HP StorageWorks Library and Tape Tools (L&TT) diagnostic software:
<http://www.hp.com/support/tapetools>

© 2004 Hewlett-Packard Development Company, L.P.

First Edition (September 2004)
Part Number: AA962-96001



AA962-96001